



Battery Trimmer
Instructions

Battery Trimmer

Please read all instructions carefully to familiarise yourself with your new Wahl trimmer before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on

T: 01227 740066

or visit

W: www.wahl.co.uk

E: customer.services@wahl.co.uk

CONTENTS

IMPORTANT SAFEGUARDS	Page 3
OPERATING INSTRUCTIONS	Page 4
TRIMMING & EDGING YOUR FACIAL HAIR	Page 5
CLEANING AND MAINTENANCE	Page 7
TROUBLESHOOTING	Page 8
PRODUCT REGISTRATION	Page 9
GUARANTEE	Page 10

Battery Trimmer

Please retain this leaflet for future reference.

READ ALL INSTRUCTIONS BEFORE USING.

IMPORTANT SAFEGUARDS

When using your electrical appliance, basic safety precautions should always be followed, including the following:

- 1.This appliance can be used by children from aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 2.Use this trimmer for its intended use only.
- 3.Do not use this trimmer with a damaged or broken blade, as injury may occur.
- 4.When discarding an old battery, do not throw into fire or where heat could cause it to rupture or explode. Also, do not attempt to recharge alkaline heavy duty or regular batteries in battery charging devices.

Battery Trimmer

OPERATING INSTRUCTIONS

BATTERY INSTALLATION/REPLACEMENT

1. Remove battery cover from trimmer by pushing in the direction of the arrow.
2. Insert the battery/batteries following the directions printed on the inside of the trimmer. Use alkaline batteries with your Wahl product. Alkaline batteries will provide the longest operating time before battery replacement is needed.
3. Replace the battery cover to its original position.
4. Replace batteries as soon as you notice the trimmer running slower than normal, to avoid pulling hairs.
5. To maximize battery life, trimmer should be shut off immediately after using.

ATTACHING GUIDE COMBS

Align comb onto the blade then press tab until it clicks into position.

SPECIAL FEATURES

Your trimmer has been designed with several advanced features to help you get perfect results every time you trim. Your trimmer may be used to neatly trim goatees, beards, moustaches, neckline, sideburns around the ears and eyebrows, or anywhere you may need grooming. It also makes a great all-around family trimmer for mini haircuts and touch ups between trips to the barber or to clean up the shape of the neck.

A 6-Position Trimming Guide makes achieving a consistent trim easy every time. (Not included in all models)

The guide can be removed (providing a seventh cutting position) and reattached without changing the pre-set cutting length, so once you have found the perfect length, there's no guesswork in achieving it every trim. The trimming guide is a two-piece assembly, consisting of a base and a comb. It should not be disassembled. To attach the guide, simply slide it on at a slight angle and press the release tab down to secure in position.

Battery Trimmer

To remove the guide, gently push up on the release tab and slide the assembly away from the trimmer. Adjust the trimming length by pressing on the thumb lever and moving the comb forward or backward to the desired setting.




TRIMMING AND EDGING YOUR FACIAL HAIR

(With 6 position guide comb)

The following are suggested trimming steps and trimmer positions. You may find different procedures work better for you.

1. Comb your beard in the direction that it grows to help reveal stray hairs that may be longer than the others.
2. Attach the 6-position trimming guide to trim and taper your beard. Begin with the guide set at a long trimming length. Trim toward your chin in smooth, overlapping strokes, following the lay of your beard. If you trim against the way your beard naturally lays, the trimmer will cut the hair much shorter and the result may be patchy.

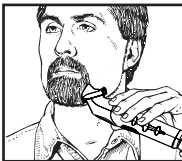

#1	Stubble Length	(2 mm)
#2	Short	(4 mm)
#3	Medium Short	(6 mm)
#4	Medium	(8 mm)
#5	Medium Long	(10 mm)
#6	Long	(12 mm)

3. To cut the outline of your beard, remove the trimming guide. Starting under your chin and working back toward your jawbone and ears, cut the outer perimeter of your beard underneath the jawbone. Continue the line all the way up to the ears and hairline.
4. Accentuate your beard line by using the trimmer in a downward motion. Start at the line you've created and, working from the chin back toward the ears, trim the area right under your beard line.
5. Define the upper part of your beard using the same technique.

Battery Trimmer



TRIMMING YOUR MOUSTACHE

1. Comb your moustache.
2. Hold the trimmer in a vertical position with the blades pointing toward you in order to define the line of your moustache.
3. With the attachment set at a fairly long trimming length, begin trimming your moustache, starting at the top and working down to your upper lip. Use progressively closer settings to get the look and length you desire. (You may also use the close-trim/Jaw line blending attachment for finish blending and tapering your moustache, *not included in all models*).
4. For tapering the moustache, set the 6-position trimming guide at a medium length. Starting in the middle of your moustache, follow the lip line and taper with short upward strokes of the trimmer, working out toward the corners until a gentle shape is created on the bottom of your moustache.
5. As a finishing step, remove the trimming guide and, using only the bare blades, make a definitive line at the bottom of your moustache.

TRIMMING YOUR MOUSTACHE (With 3 moustache trimmer attachments) - (*Not included in all models*)

Your trimmer includes moustache trimming attachments (medium and short) and the Jaw line blender. The medium cut attachment has two bars and the short cut attachment one bar. The Jaw line blender has longer teeth than the medium and shorter trimmer attachments, and may also be used as a long moustache trimming attachment. These attachments are ideal for blending, tapering and defining moustaches. To use the attachments, follow the instructions given for the Jaw Line blender attachment.

Battery Trimmer

USING THE JAW LINE BLENDER ATTACHMENT

1. Comb your moustache.
2. Cut the outline of your moustache. Holding the trimmer in a vertical position, with the nameplate side facing you, define the line of your moustache.
3. Blending. Holding the trimmer with the nameplate facing you, first take the Jaw Line blender and, starting with the middle of your moustache, lightly trim at direct angles away from the middle. For a shorter length, use the medium or short cut attachment.
4. Tapering. Hold the trimmer with the nameplate facing away from you. Take the medium or short cut attachment and, again starting with the middle of your moustache, follow the lip line and taper out the moustache until a gentle shape is created on the bottom portion of your moustache.
5. Defining. As a finishing step, hold the trimmer with the nameplate facing you. Using only the bare blades, make a definitive line at the bottom of your moustache.

CLEANING AND MAINTENANCE

OILING BLADES

For best results, put one or two drops of Wahl Clipper Oil on the blades. Oil the blades before and after every use.

When oiling the trimmer, turn the trimmer ON, hold the unit facing down and squeeze one or two drops of oil onto the blades. Wipe off excess oil with a cloth.

NOTE: Do not over oil! Excessive oiling or application of liquids will cause damage if allowed to seep back into the motor.



WARNING: NEVER IMMERSE TRIMMER IN WATER OR ANY OTHER LIQUIDS

Battery Trimmer

BLADE CARE

Trimmer blades have precision-hardened, ground and lapped cutting teeth. Blades should be handled carefully and never bumped or used to cut dirty abrasive material.

Should blades become dull or damaged, you may purchase a new blade assembly from Wahl.

CLEANING/STORAGE

Before storing your trimmer, use the cleaning brush to remove any loose hairs from the unit and the blades. Store unit in such a manner so that blades are protected from damage. When the trimmer is not in use, the trimmer guide/blade guard attachment should be in place to protect the blades.

TROUBLESHOOTING

If your product fails to operate when switched 'ON' check your batteries to see if they are properly installed. Positive end should be located as shown in battery housing. Make sure switch is in the 'ON' position and check to be sure blades are free to move. If blades become clogged, manually pushing the blades back and fourth few times while unit is turned 'OFF' may help free the blades and allow the trimmer to operate. If it still does not operate, your batteries have probably exceeded their useful life.

Battery Trimmer

PRODUCT REGISTRATION

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl Customer Care, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers.

Please take a minute to register your product online at www.wahl.co.uk.

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)



At the end of this products life it should not be disposed of with general household waste.

Care should be taken to dispose of in a suitable manner in accordance with your Local Authority regulation.

Battery Trimmer

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of 3 years from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided that there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee does not include blades etc, which are consumable parts.

This product is designed for domestic use only and use within a professional environment will invalidate the guarantee.

This guarantee in no way affects your rights under statutory law in the United Kingdom.

BLADE WEAR IS NOT COVERED UNDER THE TERMS OF GUARANTEE.

Battery Trimmer

WAHL (UK) LIMITED
HERNE BAY TRADE PARK
SEA STREET
HERNE BAY
KENT
CT6 8JZ.

CUSTOMER SERVICES T: 01227 740066
www.wahl.co.uk

Form No. 58990 Rev0 08-13